



ENGINEERING EXCELLENCE

Installation Guide

Two Handle Bar Faucet:

- 5DM100
- 5LG120
- 5LG220

This product meets the following standards:

 
- ASME A112.18.1
- ANSI A117.1
- ANSI / NSF 61, SECTION 9
- CUPC / IAPMO LISTED / ADA COMPLIANT
- CONTAINS NO MORE THAN 0.25% WEIGHTED AVERAGE LEAD CONTENT

Thank you for purchasing this Pioneer quality product.


Tools Required




Plumbers Putty



Sealant Tape

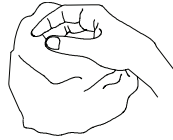

Rags

 


Adjustable-
Wrench

Prior to Installation

- Observe all local plumbing and building codes before you begin installation.
- Carefully shut off both hot and cold water supplies from under the sink.
- Plug the sink drain with a soft cloth to prevent intrusion of debris or the loss of any faucet parts.
- For replacement installations, carefully remove the existing faucet and clean the entire surface of the sink mounting holes.
- Pioneer reserves the right to make changes in the design of faucets without notice as specified in the pricebook.

Faucet Installation

- Place base plate (A) underneath the faucet.
- Apply adequate amount of plumbers putty or sealant underneath of base plate (A) if necessary.
- Lead the faucet inlet (B) through faucet holes. Make sure 'Pioneer' logo face toward the front and ensure that handles turn in correct direction.
- Slide the mounting washers (C) through faucet inlet (B).
- Thread and hand tighten the mounting nut (D) through faucet inlet (B). Make sure both side of mounting nuts (D) are securely tightened.
- Connect the faucet inlet (B) to inlet supply lines (E). Then connect the supply stop (F) to the inlet supply lines (E) (left is hot water supply and right is cold water supply). Make sure inlet supply lines (E) are securely tighten. Do not over tighten.
- Turn on water. Check for any leaks. Make sure all the connections are secure.
- Remove aerator. Open the handle.
- Flush and allow water to run at full flow for at least one minute.
- Replace aerator.

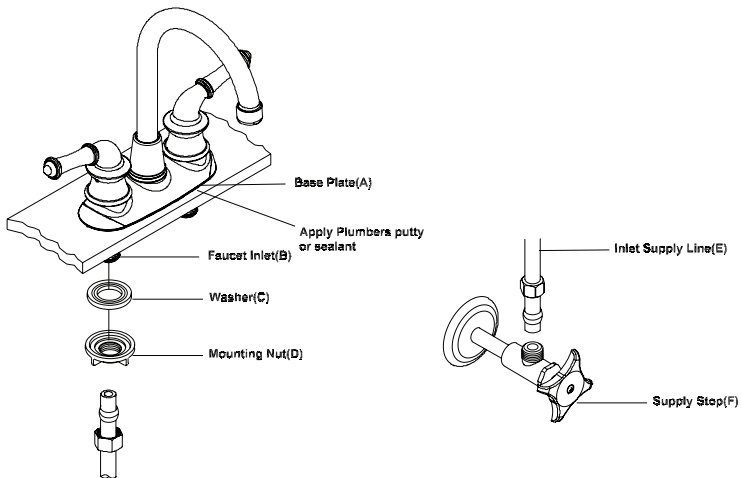

For more care information or trouble shooting inquiries about your Pioneer product, please see the contact information on the back page.



ENGINEERING EXCELLENCE

3325 S. Garfield Ave | City of Commerce, CA 90040
Telephone: (800) 338-9468 | (323) 888-8873 | Fax: (323) 888-9515
Hours: M - F, 7:30am to 5:00pm PST